

ENGINE BUILDING STRAIGHTNING DIES

CORE IN HARD METAL

Straightning dies are used to straighten the wire and to prevent torsion. They are suitable for all kinds of applications.

Type	Wire (\varnothing)	Bu Outer diameter (\varnothing)	Bi Inner diameter (\varnothing)
OVR 100	4	32	7
OVR 135	4,5	35	7
OVR 105	6	32	9
OVR 140	6	38	9
OVR 110	8	32	11
OVR 115	8	32	13
OVR 136	8	35	13
OVR 145	8	38	11
OVR 120	10	32	15
OVR 150	10	45	13
OVR 125	12	32	17
OVR 155	12	45	15
OVR 160	12	50	15
OVR 165	12	45	17
OVR 170	12 - 14	50	17
OVR 130	14	32	19
OVR 180	14	50	19
OVR 190	16	50	21

